





Step of SFT2841.exe Installation



1. Unzip SFT2841 Zip File
2. Click setup.exe



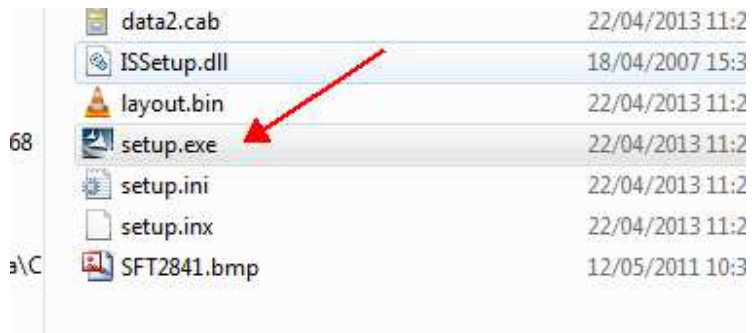



- 3.
4. InstallationShield Wizard

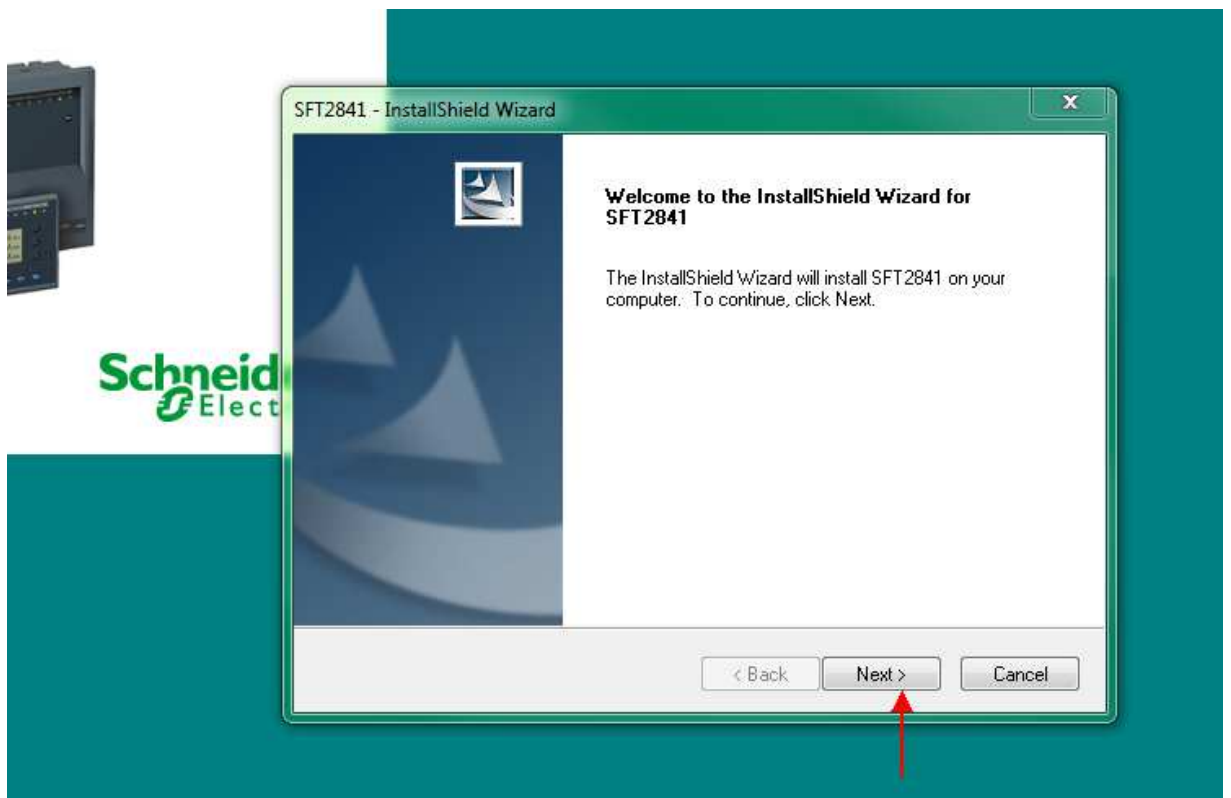


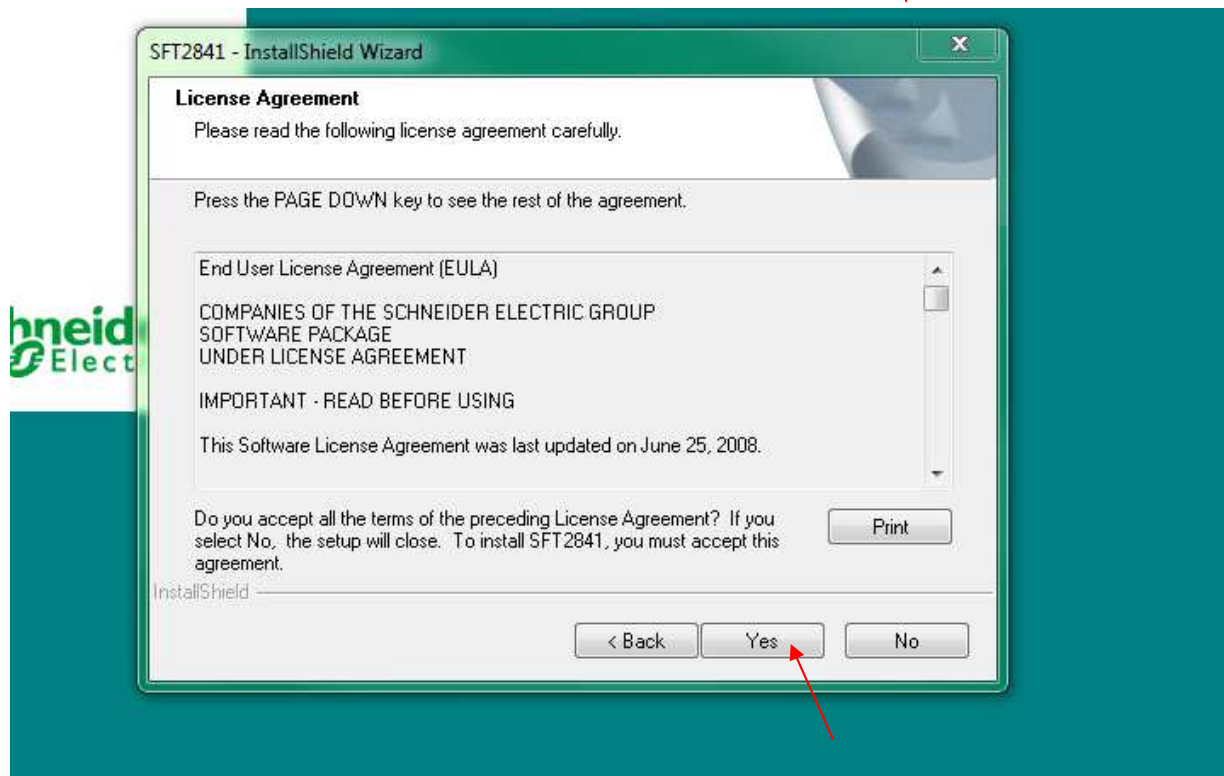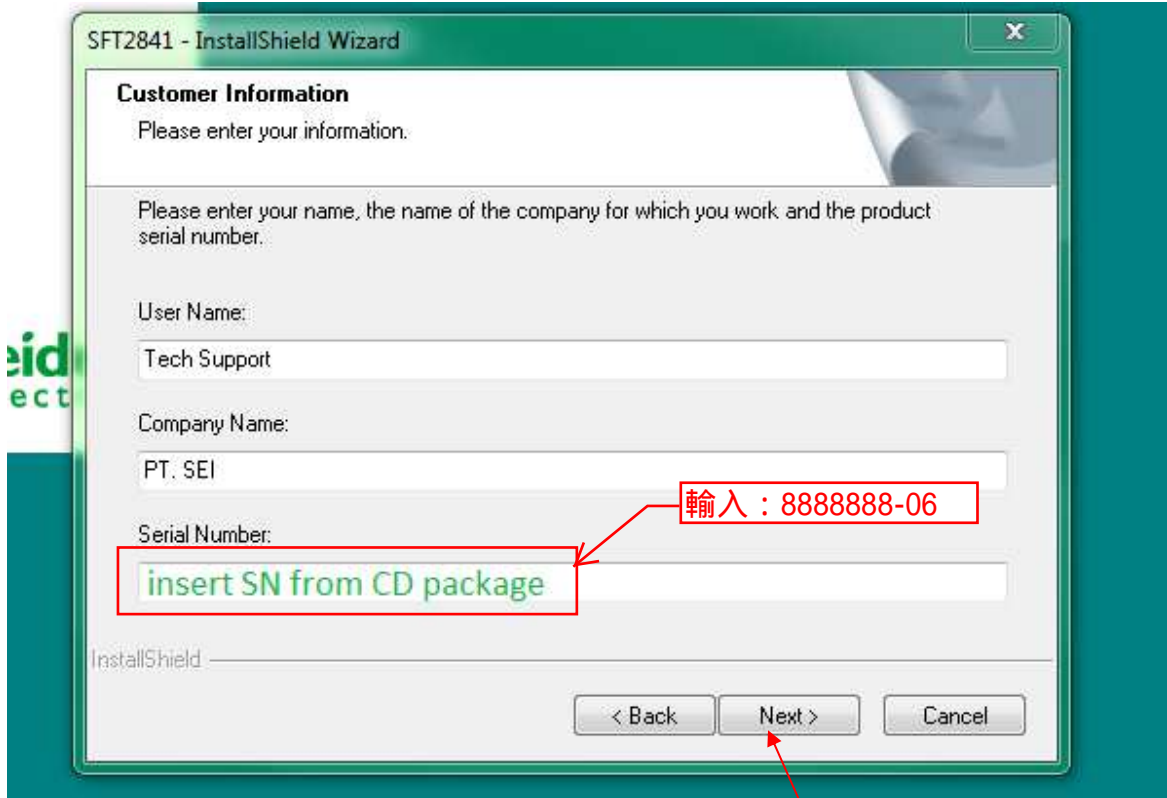

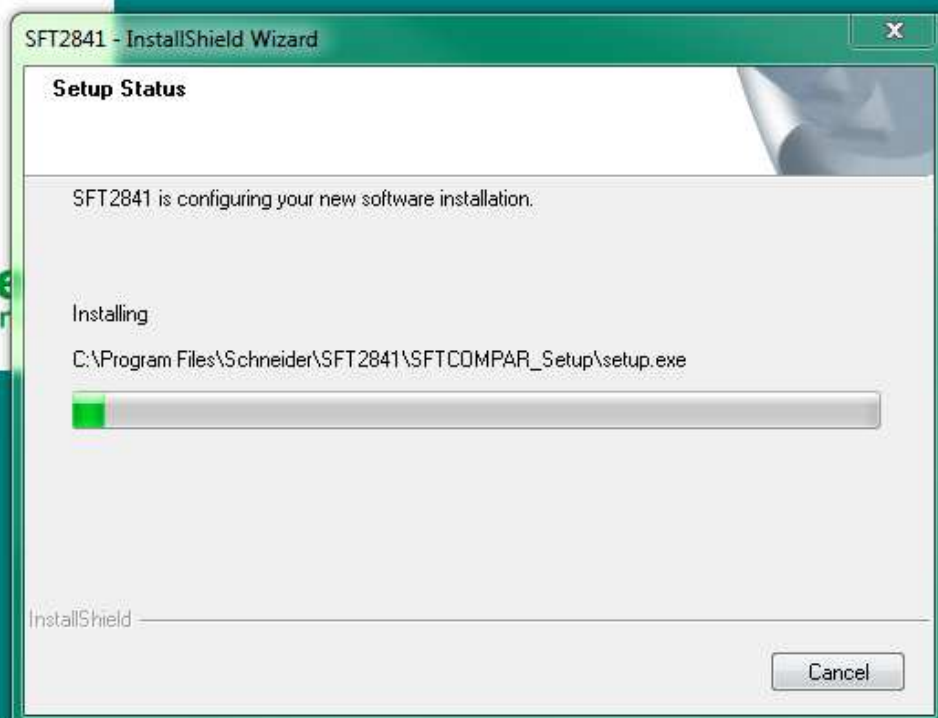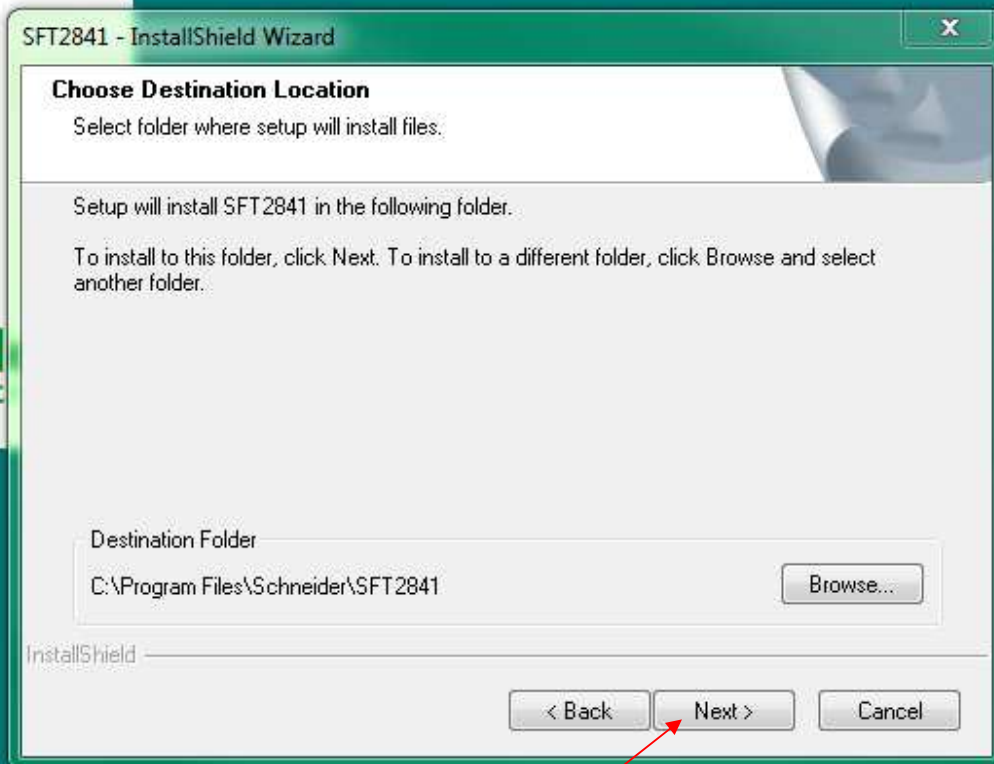

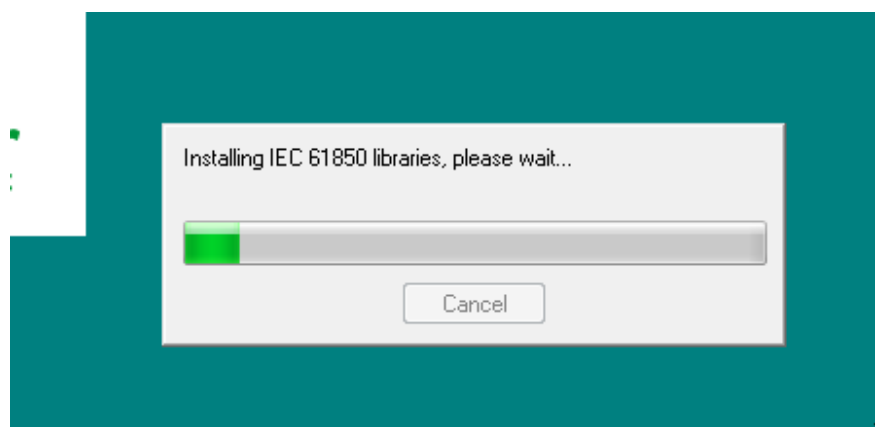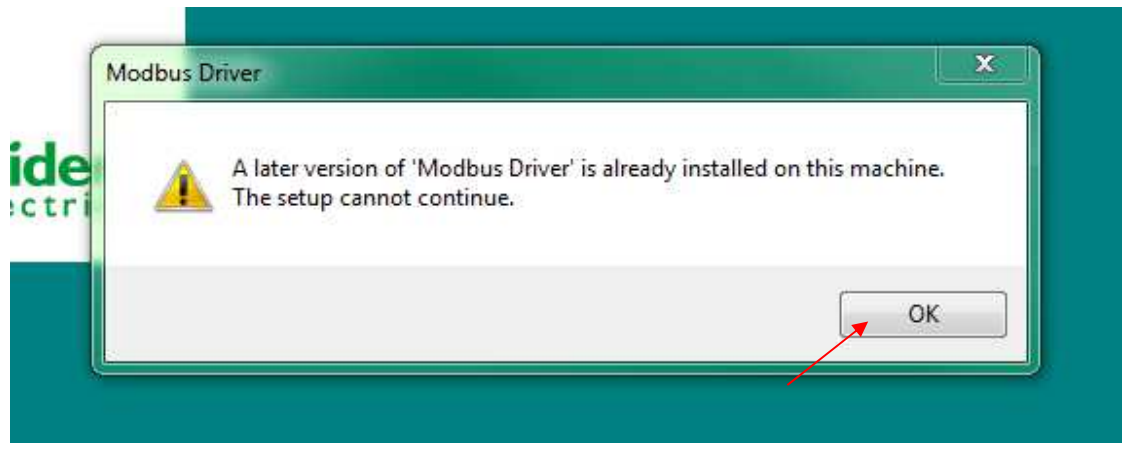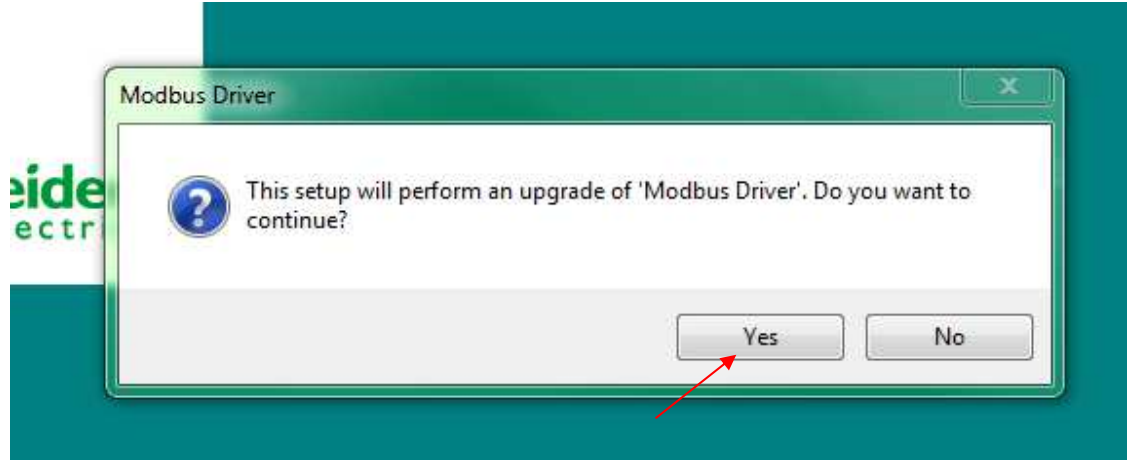

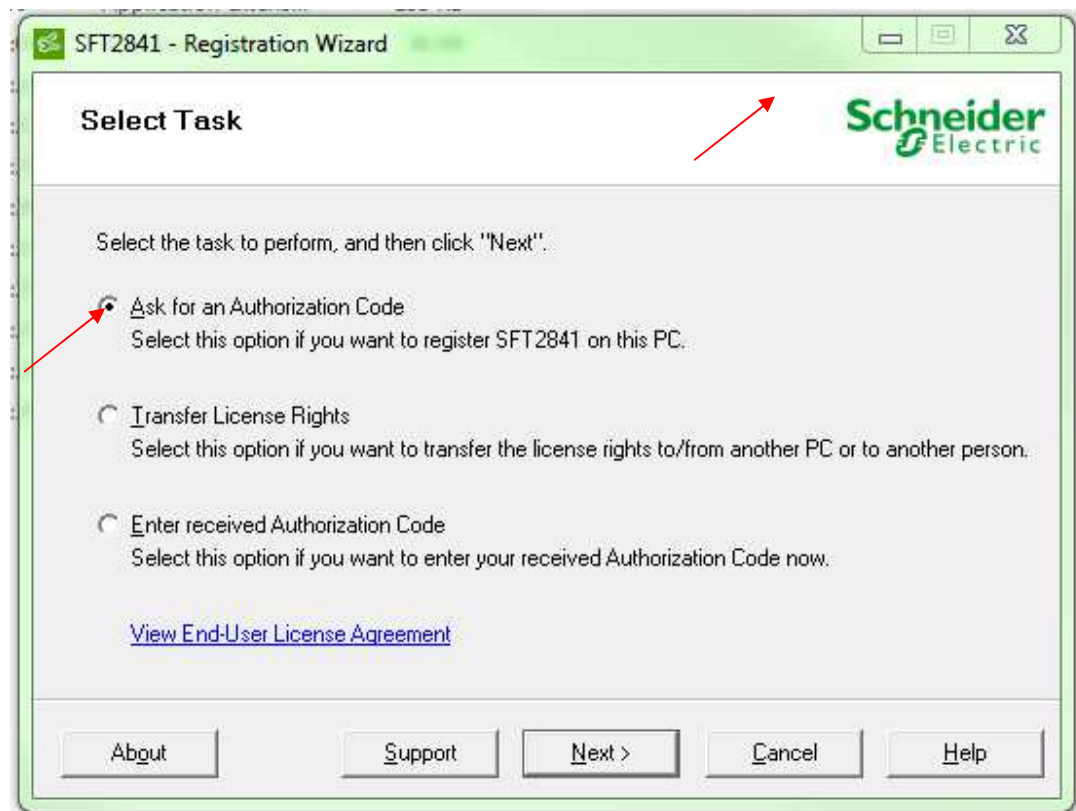

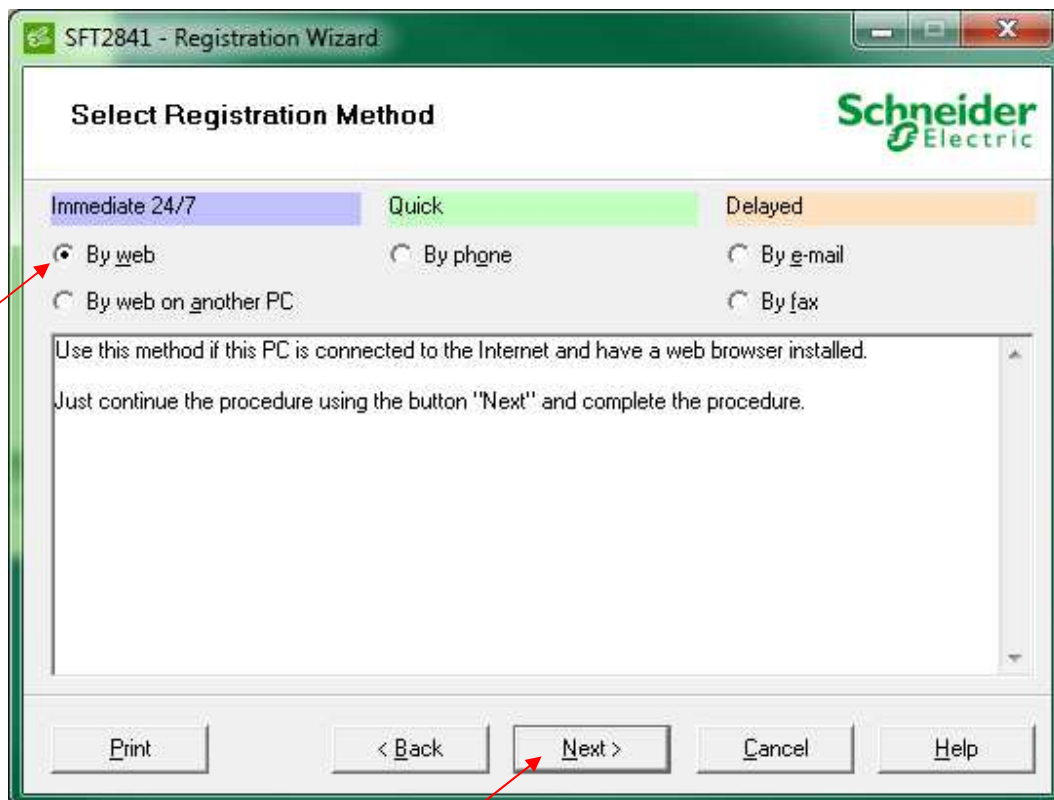

English Français Deutsch Español Português Italiano 日本語 中文

Schneider Electric undertakes to maintain complete confidentiality of your data throughout this operation.

See our complete terms and conditions online.

Product Information

Product *

Part Number *

User Information

First Name *

Name *

E-mail [About Privacy](#)

Company *

Address 1 *

Address 2 *

Address 3 *

City *

Zip/Postal Code *

State/Province *

Country *

Use International format: Country Code - Area Code - Local Number, i.e. +33 1234 1234567

Telephone - -

(Numbers only. No spaces or dashes.)

Use International format: Country Code - Area Code - Local Number, i.e. +33 1234 1234567

Fax - -

(Numbers only. No spaces or dashes.)

* = Required

[Next](#)

Success!

Thank you for using our online registration to register your Schneider Electric product.

Your SEPAM 20, 40, 60, and 80 CET Software V12.0 software is now authorized permanently on this PC, allowing you to access all the functions you have purchased.

You can now close your browser.

5. Click Finish on the installation Wizard.
6. Application is ready

